

Installation Instructions for "RZR" prt. # RZR-07

Remove seats, panel behind seats, center floor panel/consol, removable hood panel and storage pan under hood panel. Disconnect positive and negative cables from battery. Install speaker assemblies and route cables down to the battery well. Install supplied relay as shown. Route red relay coil wire down through exposed under floor cavity below drive line and plumbing. Route wire up to the back side of the dash to connect to the power receptacle wiring. Install relay wiring as shown. Drill hole in behind seat panel as shown and insert volume control cables. Connect volume control cables to volume control board in platform and install. Reinstall panel. After all connections are made reconnect battery and test speakers. Tie red relay coil wire to vehicle harness, plumbing, structure etc. keeping wire clear of drive line working from the power receptacle back to the battery.

Hole saw a 1" hole centered from side to side approximately 8" from top edge of panel. Hole should be under volume control platform when mounted. Feed the cable ends from both speakers with the small white connectors through the 1" hole from the back as shown.

Carefully plug connectors onto the volume control board. Reverse connectors if controls operate opposite speakers.

Warranty:
90 days from date of purchase on electronics.

